



SPL WATERHOUSINGS
8535 Arjons Dr. Ste N
San Diego, CA 92126
info@splwaterhousings.com
858.349.9037

LOADING YOUR NEW SPL WATERHOUSING

1. REMOVE REAR EYE PIECE OF CAMERA
2. REMOVE ANY ACCESSORIES FROM LENS, INCLUDING FILTERS.
3. TURN ON CAMERA AND ADJUST DESIRED SETTINGS (DRIVE SPEED, AUTO FOCUS, ON/OFF, MANUAL OR PRIORITY SETTINGS).
4. PLACE HOUSING ON LAP AND CAREFULLY REMOVE FRONT PORT.
5. FASTEN PLUG FROM HOUSING INTO SIDE OF CAMERA.
6. HOLD CAMERA GENTLY BY THE LENS AND SLIDE CAMERA INTO HOUSING AT AN ANGLE.
7. THEN WITH LIGHT PRESSURE ON PLUG SLIDE PLUG SIDE INTO HOUSING.
8. CHECK BOTTOM OF CAMERA TO MAKE SURE IT IS FLAT ON BOTTOM PLATE.
9. MAKE SURE CAMERA SITS WITH LENS SQUARE ON BOTH HORIZONTAL AND VERTICAL PLANES.
10. CHECK O-RING FOR DIRT OR SAND.
11. CHECK FOR DUST AND DIRT ON INSIDE OF FRONT PORT BEFORE PLACING IT ON HOUSING.
12. TIGHTEN EACH WING NUT SLIGHTLY AND EVENLY AROUND PORT.
13. WATCH THE O-RING (DARK BLACK LINE) SEAL AGAINST FRONT PORT.
14. TIGHTEN WING NUTS UNTIL A 1/8 DARK BLACK LINE COMPLETELY SEALS THE FRONT PORT. (IF YOU STRIP OUT THE PLASTIC WING NUTS, YOU ARE TIGHTENING THEM TOO MUCH.)
15. TO TIGHTEN FLASH AND PISTOL GRIP NUTS. JUST TIGHTEN HAND TIGHT THEN JUST A FEW QUARTER TURNS AFTER.
16. DO YOUR OWN TEST TO SEE HOW TIGHT YOU NEED TO TIGHTEN UNTIL THE HOUSING DOES NOT LEAK. NEVER OVERTIGHTEN ANY THING. THIS WILL CAUSE THE HOUSING TO LEAK.
17. ALWAYS CHECK HOUSING BY DUNKING IT UNDERWATER AS YOU ENTER THE WATER.
18. THE MAIN DIAL CONTROL ON THE BACK OF THE CAMERA WORKS LIKE YOUR THUMB AND IS IN THE SAME POSITION. THE LINE ON THE DIAL IS IN THE SAME DIRECTION AS THE LEVER ON THE INSIDE. JUST TURN IT FROM ABOUT 7 OCLOCK OR SO UPWARD WITH A SMALL AMOUNT OF INWARD PRESSURE. YOU WILL FEEL THE LEVER HIT THE DIAL THEN COME BACK OUT. THIS IS WHERE IT WILL BRUSH THE DIAL. USE A LITTLE PRESSURE AND KEEP TURNING UPWARD. YOU WILL ONLY HAVE TO TURN A SMALL AMOUNT BEFORE YOU CHANGE THE SETTING

THANKS AND HAVE FUN!
SEAN LABRIE

If you have any questions or concerns, please do not hesitate to contact me by phone at 858.349.9037, or E-Mail at LABRIESANTOS@SBCGLOBAL.NET

Care instructions

1. Always take care of your housing.
2. Wash housing with fresh water after every use. **Very Important**, wipe front o-ring with damp cloth gently.
3. Lube front, bottom, and top o-ring using o-ring lube (silicon lube only) supplied by splwaterhousings after every use. Only use small amount to make o-ring shiny. If you can actually see the lube you are using to much. The o-ring should just look wet.
4. Always loosen wing nuts and bottom and top lock nuts when not using. As well as the front wingnuts. Should always be loose when not in use.
5. **Make sure not to over tighten nuts on bottom and top of housing. There should be plenty of room left.**
6. If you have a problem or find a leak no matter how small call us at 858-349-9037. If we can we will give you instructions on how to fix it. If not send it back immediately. Do not have anyone else work on a SPLWATERHOUSING except us.

THANKS AND HAVE FUN!

SEAN LABRIE

www.SplWaterhousings.com

If you have any questions or concerns, please do not hesitate to contact me by phone, at 858.349.9037, or E-Mail at labriesantos@sbcglobal.net